


Southcom SC-130D (S/N ~#1250, Finnish "USB only" configuration)  
PC101 external connections

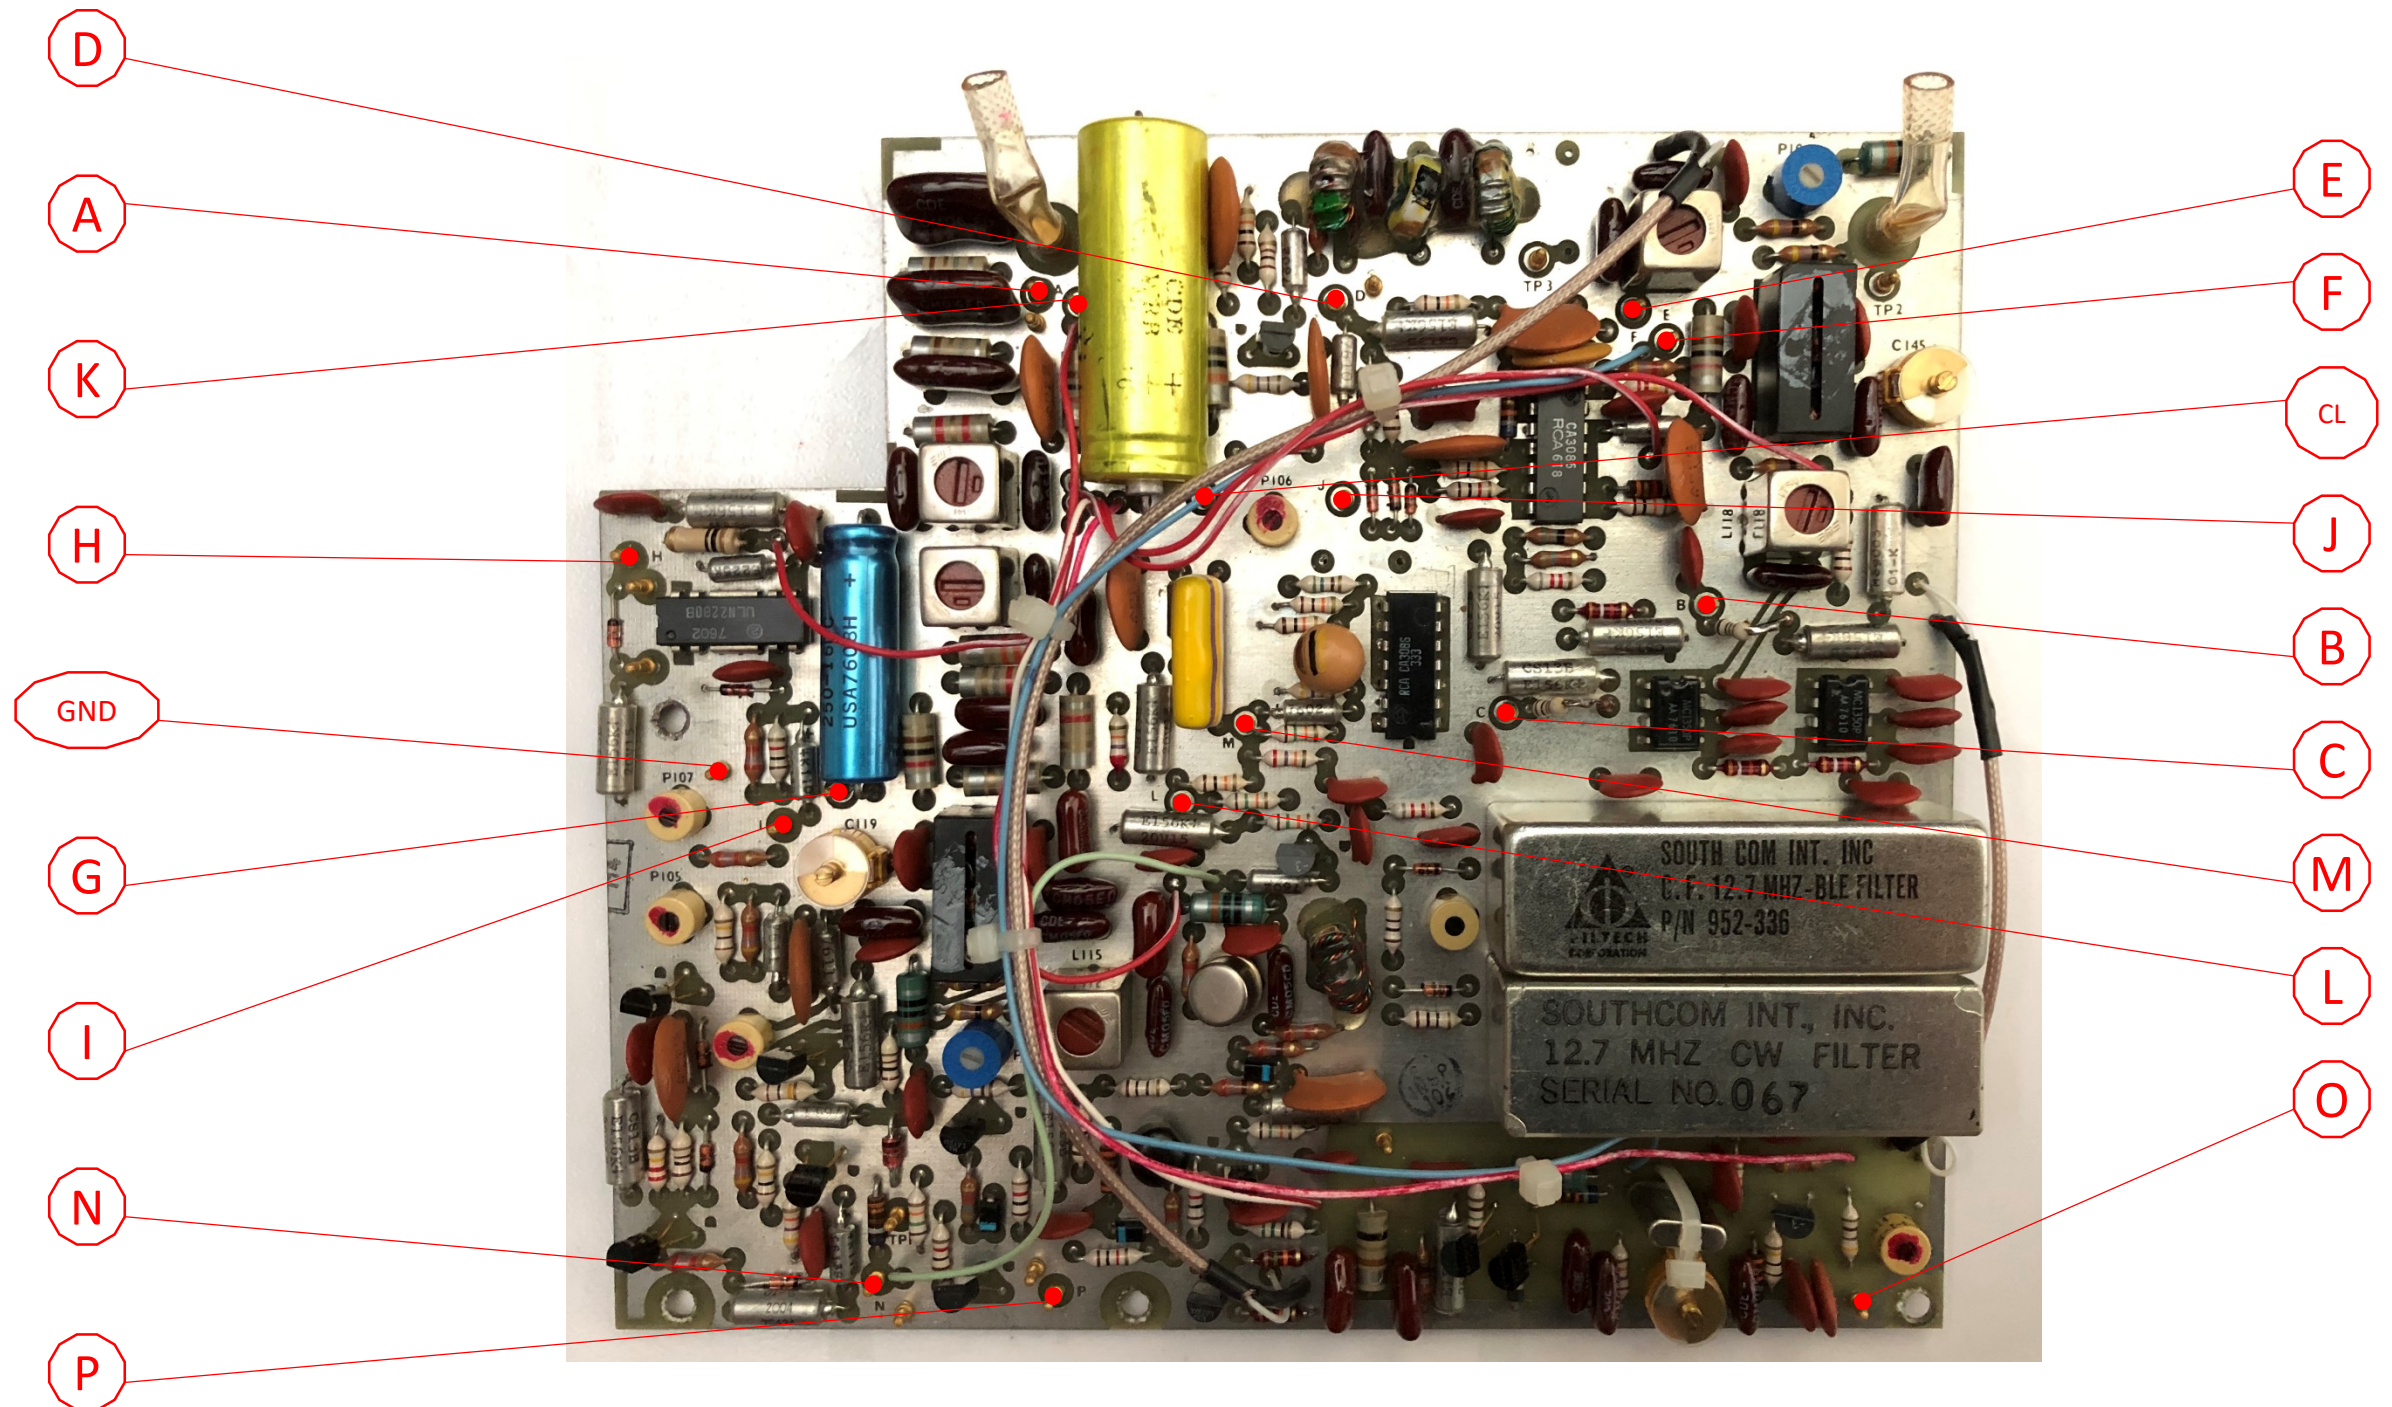

D	TX OUT (TX line to PC401)	coax [46]
A	RX IN (RX line from PC401)	coax [54]
K	+ 12 VDC	white/red
H	Audio stop (tune only)	white/violet
GND	Ground	black
G	Speaker	white/blue
I	Volume (slider)	green
N	Mic input (from PC501 connector board)	coax [37]
P	Local Oscillator (LO line from PC301)	coax [20]

E	+ 8VDC (from PC301)	white/orange
F	Volume (hi)	yellow
CL	+12 VDC on transmit (from PC401)	orange
J	ALC (to PC401)	white/green
B	CW on (+ 12 VDC on CW)	violet
C	USB on (+12 VDC on USB/AM)	brown
M	CW key line (to PC401)	grey
L	CW on (+8 VDC on CW)	blue
O	AM on	white/black

Note: Coaxial cables [XX] have the shield connected to a ground near the signal connection marked with a letter. Both the signal and ground connections have similar pins, so check which one is grounded.